

Redundancy Recording Setup Guide

E Series	Entry IP Lineup Easy Inatallation & Op Economic Value	peration	Porssonio		
Panasonic K-NL308K					

9th Dec 2014

Security Systems Business Division

Panasonic System Networks Co., Ltd.

Panasonic

<NOTICE>

This document is supplementary to the operation manual.

Depending on the firmware version used for E-Series NVR, the screens may differ from the actual screens.

Set Up Flow

HDD Configuration



Redundant Recording Activation

Redundancy Recording Setup Procedure

Precondition

Install 2 HDD units on NVR

HDD Configuration

		SETTING				
		To EVENT	STORAG	E 🛃 SYSTEM		
SCHEDULE HDD MANAGE	SATA 1 2			Read-Write" for o		ther HDD
RECORD HDD MANAGER	00					
	Device Name SATA-1 SATA-2	Type Read-Write + Redundant +	Status Normal Normal	Remain/Total 798.19 GB/931.40 GB 2.72 TB/2.72 TB		
		Read-Write Read-Only Redundant HDD				
	(Refresh)	Format				
Click "Form	[CAUT	ION] at" needs to be e	xecuted to		Apply)	

Redundant Recording Activation

5



